



701 S Ridge Avenue, Troy, OH 45374  
1-888-4HOBART • www.hobartcorp.com

# FOODWASTE DISPOSER REPLACEMENT CONE ADAPTERS

**FOR INSTALLATION  
OF HOBART  
DISPOSERS ON  
EXISTING CONES.**



# FOODWASTE DISPOSER REPLACEMENT CONE ADAPTERS

**HOBART**

701 S Ridge Avenue, Troy, OH 45374  
1-888-4HOBART • www.hobartcorp.com

## HOW TO REPLACE OLD FOODWASTE DISPOSERS

Each year, thousands of commercial foodwaste disposers reach the age and condition where it is *more practical to replace* than to maintain them.

Adapters are usually required to fit disposers to original cones (including sink or trough connections). In order to choose the correct adapter for replacement installation, follow the procedure below:

### PROCEDURE:

**STEP 1.**  
Identify Cone type on chart below.

**STEP 2.**  
Measure throat opening size of cone (inside diameter). (Dimension A)

A suggested method is to use two sticks or pencils. Insert them into the throat of

the cone, sliding them apart until they touch the sides at the widest part of the throat. Then remove and measure their extended length. (Fig. 1)

**STEP 3.**  
Measure bolt circle diameter (DISTANCE BETWEEN CENTER OF OPPOSITE BOLT HOLE). (Dimension B).

If old Disposer is still in place, measure with calipers or form one from stiff wire. Bend until ends touch center of opposite bolt heads. Remove and measure distance between ends. (Fig. 2)

**STEP 4.**  
When dimensions A & B and Cone Type have been determined, select proper adapter from list on facing page.

**IMPORTANT:** Measure height of old disposer and check drain size. Compare to dimensions in specification sheet to make certain your new disposer will fit.

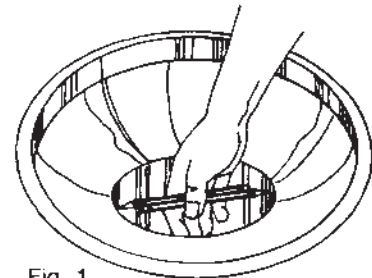


Fig. 1


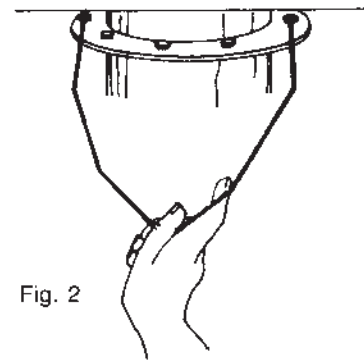


Fig. 2


### TYPE 1

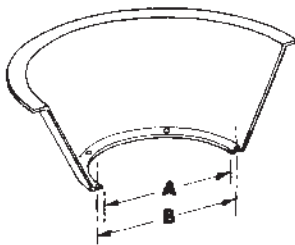

### BOWL TYPE CONE

The Disposer is bolted directly to a turned-in flange or a loose ring inside cone.


### TYPE 2

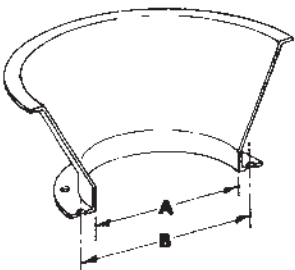

### CONE W/LARGE FLANGE

The Disposer bolts directly to the flange on the bottom of this type Cone.

### TYPE 3

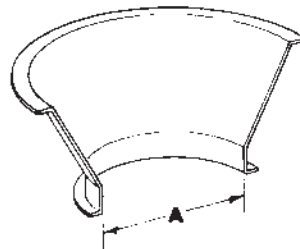


### CONE W/SMALL FLANGE LIP

The Disposer fastens to a small lip on the bottom of the Cone by one of the following methods:

1. Two-piece Clamp Rings — spread and reassemble above cone lip — bolts fasten to Disposer.
2. Loose Collar Ring slips onto the Cone before the lip is rolled on the Cone. The Disposer bolts to the collar.
3. Molded or hose-type rubber connector fits over the Cone lip and is secured by means of hose clamp type connector.


### TYPE 4

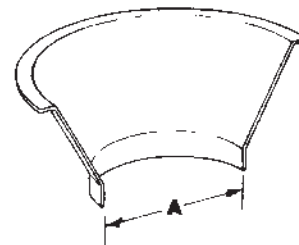

### SLEEVE TYPE CONE

Raise Disposer using adjustable support legs so that the Cone sleeve fits tightly into a seal in the mouth of the Disposer. **Only FD-150 thru FD-500, FD2-150 thru FD2-300 and FD3-150 thru FD3-300.** Disposers with adjustable legs can be used with this type Cone.

### TYPE 5

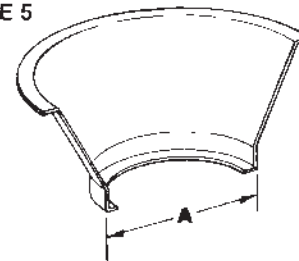

### SLEEVE TYPE CONE



Turned-in flange, against which a seal is compressed. **Only FD-150 thru FD-500, FD2-150 thru FD2-300 and FD3-150 thru FD3-300.** Disposers with adjustable legs can be used with this type Cone.



701 S Ridge Avenue, Troy, OH 45374  
 1-888-4HOBART • www.hobartcorp.com

# FOODWASTE DISPOSER REPLACEMENT CONE ADAPTERS

## SIZING CHART

CONE TYPE	DIMENSION		USED BY	ADAPTER REQUIRED	FOR HOBART MODELS	SPECIAL INSTRUCTIONS
	A	B				
1	4½	5½	Hobart, Kitchen Pig, Salvajor, Bus Boy	ML-31167	All	Reuse loose internal clamp ring, if present.
2	4½	5½	Waste King, Red Goat, In-Sink-Erator, National, Big Genie	ML-31159	All	None
2	6	6¾	Atomic	ML-31160	All	None
2	9	11⅞	Hobart	ML-31168	All	None
3	4½	—	In-Sink-Erator, Waste King, Toledo	ML-31159	All	None
3	6	—	In-Sink-Erator, Waste King, Toledo, Bus Boy	ML-31160	All	Remove Waste King, loosen collar, or push it up and out of the way.
3	8	—	In-Sink-Erator, Toledo	ML-31166	All	Reuse clamp ring mounting screws.
3	4⅝	—	FMC	ML-31169	All	None
3	5¼	—	FMC	ML-31170	All	None
3	6⅝	—	In-Sink-Erator, Toast-Master	ML-31171	All	None
4	4½	—	Red Goat	ML-31162	 FD2-150 FD2-200 FD2-300 FD3-150 FD3-200 FD3-300 FD-500 	None
4	6	—	Waste King	ML-31163		None
4	6½	—	Salvajor	ML-31164		None
4	6⅝	—	General Electric	ML-31165		None
5	5⅜	—	Hobart	ML-31161		None
4	7	—	Red Goat	None		Use Disposer legs to "jack-up" so cone sleeve is inserted in Disposer throat
3	7	—	National, Big Genie, Toledo	None	All	None


NOTE: If disposer is installed in sink or trough, it will be connected to an adapter exactly like the cone connection

# FOODWASTE DISPOSER REPLACEMENT CONE ADAPTERS


# HOBART

701 S Ridge Avenue, Troy, OH 45374  
1-888-4HOBART • www.hobartcorp.com


## STAINLESS STEEL ADAPTER KIT DESCRIPTIONS

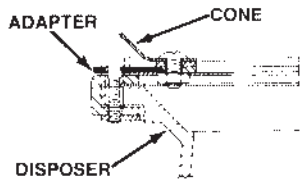


**ADAPTER #ML-31167**  
Bolts directly to a Type #1 Cone.

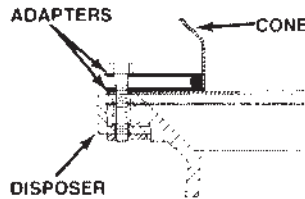


**ADAPTERS #ML-31162,  
#ML-31163, #ML-31164 and  
#ML-31165**  
Use an "O" Ring to seal around the  
sleeve of a Type #4 Cone.

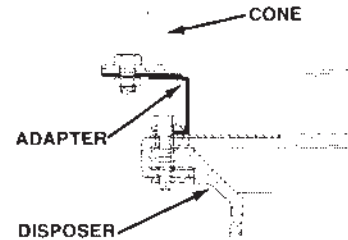


**ADAPTER #ML-31166**  
Bolts directly to existing clamp ring of  
Type #3 Cone. Reuse clamp ring and  
screws already on the Cone.

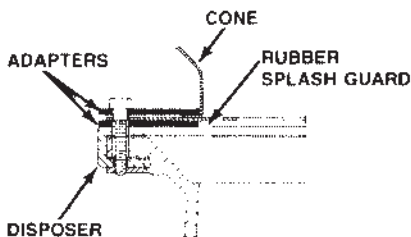

**ADAPTERS #ML-31159,  
#ML-31160, #ML-31169,  
#ML-31170 and #ML-31171**  
Clamp to flange of Type #2 or Type #3  
Cones. Rubber splash guard between  
solid ring and split ring. Use silicone seal  
to make it permanent.

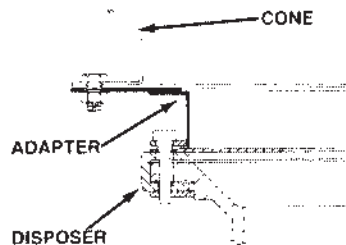

**ADAPTER #ML-31168**  
Bolts directly to a Type #2 Cone.

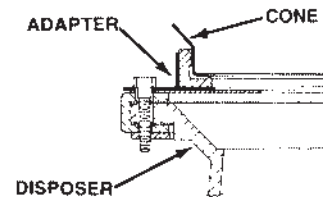

**ADAPTER #ML-31161**  
Retains a special seal which is com-  
pressed against a Type #5 Cone.

**NOTE:** Sealastic or similar silicone gasket  
material should be used if additional  
sealing is required when adapting a new  
disposer to an existing cone.

As continued product improvement is a policy of Hobart, specifications are subject to change without notice.

# HOBART

CORPORATION

701 RIDGE AVENUE  
TROY, OHIO 45374-0001

FORM F-7543 (REV. 8/03)

LITHO IN U.S.A. (H-01)

Printed On Recycled Paper